

Volae Expedition 26/26 Fender Installation Instructions



**Hostel
Shoppe**

Hostel Shoppe
929 Main Street
Stevens Point, WI 54481
<http://www.hostelshoppe.com>
Toll Free: 800-233-4340



Volae Expedition 26/26 Fenders:

- (1) 26" 45mm Front Fender
- (1) 26" 45mm Rear Fender
- (6) Fender Clips and Locking Screws
- (6) Fender Braces
- (5) Hex Screws with Washers
- (1) Fork Crown Bolt and Nut with Washers
- (1) Rear Mounting Clip



Step 1: Rear Fender

Start by installing the Fender Clips on your fender. There will be four on the rear fender (two on each side) and two on the front (one on each side).

The clips slide on from the end of the fender – the fit should be snug.



Step 2:

Attach two fender braces to each side of the rear dropout using one hex screw and washer for each pair. Tighten them enough so they stay in place, but not so tight that you can't adjust their position.

Note: If you have weight-bearing accessories like a rack or kickstand bracket, the fender braces should be outside of those – the weight-bearing accessories should be next to the frame.



Step 3:

Set the fender on the rear tire and slide the Rear Mounting Clip over the front end of the fender underneath the frame. Use one hex screw and washer to attach it to the fender mount on the underside of the frame.

Tip: For extra stability, you may want to drill a small hole in the Mounting Clip and bolt it to the fender.



Step 4:

Adjust the sliding fender clips so they will offer even support around the circumference of the fender. Next, remove the cinch barrel from the fender clips so you can see where the fender braces will insert.

Hold the fender so that it matches the profile of your tire and mark the fender brace with a marker about 1/2 inch from the end of the mounting clip. Repeat with the other braces.



Step 5:

Using a heavy-duty side cutter or hacksaw, cut off the braces at the marks you just made.



Step 6:

Insert the trimmed brace into the fender clip and loosely screw the cinch barrel over it. Slide the fender clip up or down on the brace to match the profile of the tire and tighten the cinch barrel to hold it in place.


Go back to Step 4 and repeat for the remaining three braces.



Step 7: Front Fender

Slide the two remaining fender clips on to the fender (see Step 1).

Attach your front fender to the fork with the Fork Crown Bolt, washers and locknut.

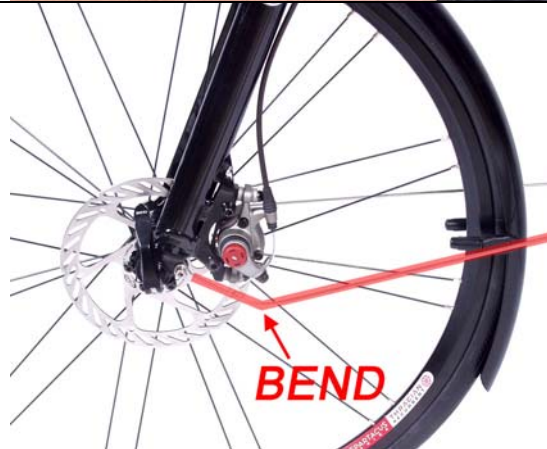

Step 8:

Loosely attach the remaining two fender braces to the fork eyelets (see Step 2).

Create a slight bend with your fingers to allow clearance below the brake caliper. Cut the brace to length (see Steps 4, 5, 6) and tighten all bolts.



Step 9:

When you're happy with the position of your fenders and braces, screw the clip locking screws into the clips to hold everything in place.

You're done, go ride!



**Hostel
Shoppe**

Hostel Shoppe

929 Main Street

Stevens Point, WI 54481

<http://www.hostelshoppe.com>

Toll Free: 800-233-4340